

BUT HOW DO I CHANGE THE COLORSSSS???




GO GUPPIES!

DEFAULT • BRIGHTNESS
KNOB ADJUST BRIGHTNESS.

1-CLICK • COLOR
KNOB ADJUST STATE COLOR.

2-CLICKS • TWINKLE
KNOB ADJUSTS INTENSITY OF TWINKLE.

3-CLICKS • PARTY
KNOB ADJUSTS SPEED OF COLOR FADE.

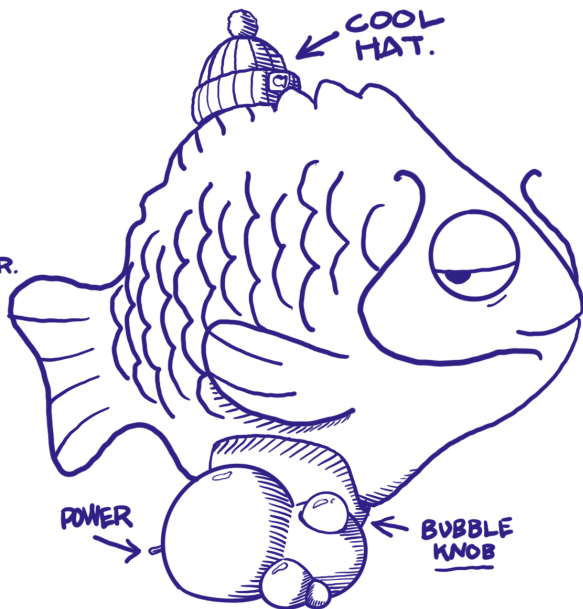

THERE ARE 4 MODES.
CYCLE THROUGH BY CLICKING
THE KNOB.

→ PRESS + HOLD KNOB TO RESET TO **DEFAULT**

→ GUPPIES REMEMBER THEIR LAST COLOR
WHEN YOU TURN THEM OFF.

QUESTIONS?

EMAIL US: HELP@POLIS.TV

LOVE IT? HATE IT?
LEAVE US A
STRONGLY WORDED
REVIEW!



A PROJECT BY

